

# Bullseye B500 Series Locks


## Change Instructions




1-800-364-4899 [bullseyesdlocks.com](http://bullseyesdlocks.com)



4. Rotate guard key **COUNTER CLOCKWISE** and remove.

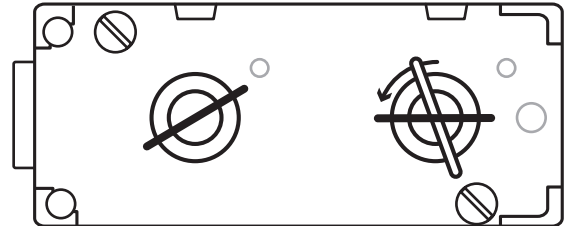


5. Insert new guard key and rotate **CLOCKWISE** until it stops.

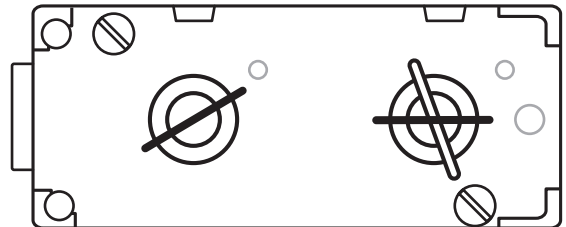

6. Use change tool to tighten guard fence clamp screw **CLOCKWISE**.


**CAUTION:** Make sure key does not move from stop position while tightening clamp screw.

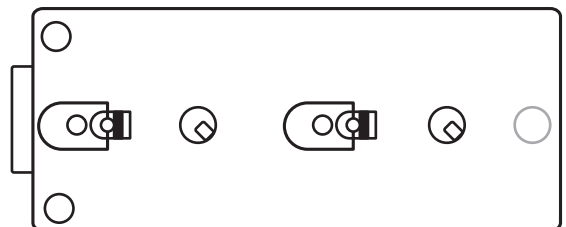


7. Rotate renter key **COUNTER CLOCKWISE** and remove.
8. Rotate guard key **COUNTER CLOCKWISE** and remove. Lock is set.

### ▶ CHANGING THE GUARD SIDE

1. Insert guard key. Rotate **CLOCKWISE** until it stops.
2. Insert renter key. Rotate **CLOCKWISE** until it stops. Lock should be in unlock position now.

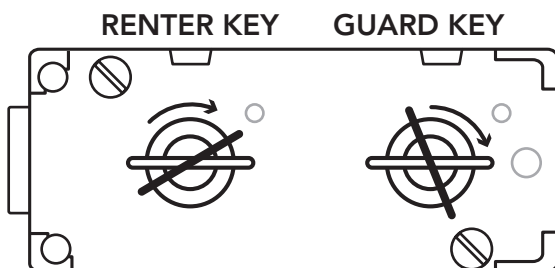

3. Loosen guard fence clamp screw (on back, center of lock) with change tool. Turn no more than 3 times **COUNTER CLOCKWISE**.

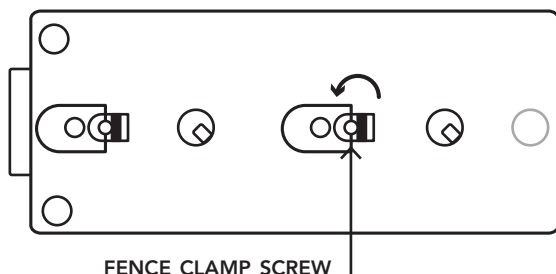

# Bullseye B500 Series Locks


## Change Instructions




1-800-364-4899 [bullseyesdlocks.com](http://bullseyesdlocks.com)

### ► CHANGING THE RENTER SIDE


1. Insert original (guard and renter) keys and retract bolt to open position.

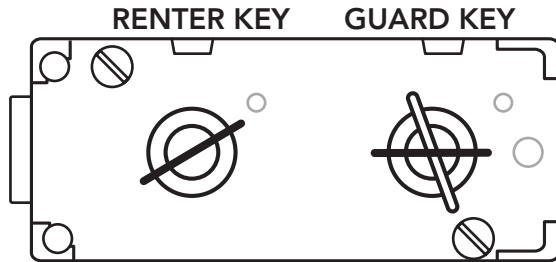

3. Rotate renter key backwards (away from bolt) and remove renter keys.

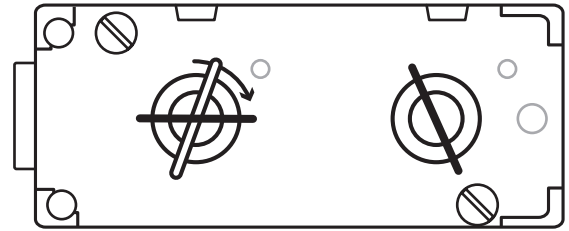

2. Insert change tool in the renter side hex screw (renter fence clamp) in back. Turn twice. (do not overturn as screw will fall out.)

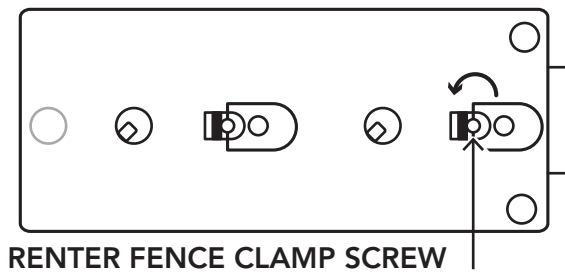

4. Insert new renter keys and rotate until hex screw is lined up with the second hole. Retighten screw. Lock should be set.

